LIMITED WARRANTY* ONE (1) YEAR:
Your small kitchen appliance is warranted to the original purchaser to be free from any manufacturing defects under normal use and conditions for one (1) year, cord excluded. During that period, should the appliance fail to operate properly, return the appliance with your sales receipt to the store where purchased. If you use your appliance for household use and according to instructions, it should give you years of satisfactory service. This product warranty covers only the original consumer purchaser of the product.

WARRANTY IS ONLY VALID WITH A DATED PROOF OF PURCHASE.
To guarantee repair or replace without charge, a dated sales receipt showing purchase within the limited warranty period* must accompany the appliance. Without a sales receipt, warranty will be estimated according to the appliance's manufactured date. A comparable appliance should arrive within 2-3 weeks. However, in case an appliance is not covered by warranty, correspondence offering alternatives will be mailed to you.
During the one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to our Service Center. (See the "Returns" section below). The repaired or replacement product will be in warranty for the remaining balance of the one-year warranty period and an additional one-month period.

This limited warranty covers appliances purchased and used within the 50 contiguous states plus the District of Columbia and does NOT cover:

- Damages caused by unreasonable use, neglect, normal wear and tear, commercial use, improper assembly or installation of product.
- Damages caused in shipping.
- Damages caused by replacement or resetting of house fuses or circuit breakers.
- Defects other than manufacturing defects.
- Breakage caused by misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
- Lost or missing parts of the product. Parts will need to be purchased separately.
- Damages of parts that are not electrical; for example: cracked or broken plastic or glass.
- Damage from service or repair by unauthorized personnel.
- Extended warranties purchased via a separate company or reseller.
- Consumer's remorse is not an acceptable reason to return a product to our Service Center.

*The consumer is responsible for any delivery charges for all replacement units provided for exchange under the warranty.

RETURNS: Any return of defective merchandise to the manufacturer must be processed accordingly by contacting customer service first to obtain an RA # (Return Authorization Number). We will not accept any returns of merchandise without an applicable RA #.
We cannot assume responsibility for loss or damages to products returned to us during incoming shipment. For your protection, always carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your return: any accessories related to the problem, your full address and daytime phone number, a note describing the problem, a copy of the dated sales receipt or other proof of purchase and a valid RA#.
C.O.D shipments cannot be accepted.

*One Year Limited Warranty valid only in the **50 contiguous states plus the District of Columbia**, **excluding** Puerto Rico and the Virgin Islands.
This warranty is effective only if the product is purchased and operated in the USA; product usage which is in violation of the written instructions provided with the unit will void this warranty.
For international warranty, please contact the local distributor.
**Any instruction or policy included in this manual may be subject to change at any time.

Model EBL-2000G *Elite Gourmet*® **10 Speed Blender with 48oz. Glass Jar**

***MAXI-MATIC*®, USA**
18401 E. Arenth Ave. City of Industry, CA 91748
Customer Service Dept: (626) 912-9877 Ext: 120 MON-FRI 9am-5pm PST
Email: info@maxi-matic.com Website: www.maxi-matic.com

Elite
BY MAXI-MATIC®

Gourmet

10 Speed Blender
with 48oz. Glass Jar

Model EBL-2000G

INSTRUCTION MANUAL

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USE.
WARNING—To avoid the risk of electrical shock, always make sure the product is unplugged from the electrical outlet before assembling, disassembling, relocating, servicing, or cleaning it.

WARNING-To reduce the risk of fire, electric shock, or serious personal injury:

- Always unplug the product from the electrical outlet before relocating, servicing, or cleaning it.
- Do not plug/unplug the product into/from the electrical outlet with a wet hand.
- Do not operate the product if the power cord is cut, damaged, or if the wires are exposed.
- Keep the power cord and product away from heated surfaces, including stovetops.
- Do not immerse in or expose the base, power cord, or plug to water or other liquids. Do not attempt to open any part of the base.
- To disconnect the product from an electrical outlet, pull directly on the plug; do not pull on the power cord.
- Do not put any stress on the power cord where it connects to the product, as the power cord could fray and break.
- If using an extension cord with this product, the marked electrical rating of the cord set or extension cord must be at least as great as the electrical rating of the product.
- Keep hands and utensils out of container while blending. A scraper may be used but only when the blender is not running.
- Do not operate the product if it has a damaged power cord or plug, malfunctions, or is dropped or damaged. This product has no user-serviceable parts. Do not attempt to examine or repair this product yourself. Only qualified service personnel should perform any servicing; take the product to the appliance repair shop of your choice for inspection and repair.

CAUTION-- To reduce the risk of personal injury or product/property damage:

- This product is intended for use in blending food products; do not use the product for any other purpose.
- Keep the product out of the reach of children and pets. This product is not intended for use by children.
- Do not leave the product unattended while it is in use, especially when children are present. Extra caution is necessary when using this product near children. Always unplug the product from the electrical outlet when it is not in use.
- Do not use attachments not recommended or not sold by the manufacturer or it may cause risk of injury to persons.
- This product contains exposed sharp metal blades. Use extreme caution when handling.
- Avoid contact with moving parts.
- Always operate blender with cover in place.
- Always operate the product on a flat, level, stable surface to avoid overturning it.
- Ensure the product is off before adding or removing parts. Do not attempt to place the Glass jar onto the Base while the motor is running. Do not attempt to remove the Glass jar from the Base while the motor is running.
- Correctly attach the blade assembly to the glass jar before putting the Glass jar onto the Base. To reduce the risk of injury, never place cutter-assembly blades on the base without glass jar properly attached.
- After operating continuously for three minutes, wait at least one minute before operating the product again to help prevent the motor from overheating.
- Do not run motor while Glass jar is empty.
- This product is intended for indoor, non-commercial, non-industrial, household use only. Do not use outdoors.
- Do not let cord hang over the edge of a table or counter.
- This product uses a short power cord to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord.

WARNING: This product is equipped with a polarized plug (one blade is wider than the other blade) to reduce the risk of electrical shock. This is a safety feature. The plug will fit into a polarized outlet only one way. If you are unable to insert the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless you can fully insert the plug into the extension cord. Do not alter the plug. Do not attempt to defeat the safety purpose of the polarized plug.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

PARTS INDICATOR

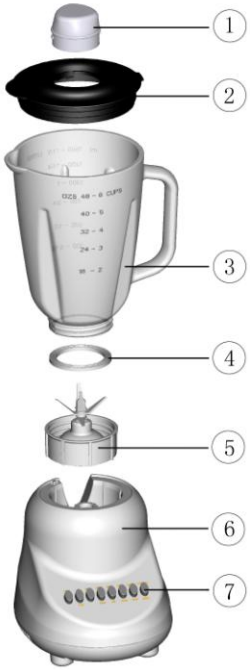

1. Cap
2. Lid
3. Glass Jar
4. Gasket
5. Blade Assembly
6. Motor Housing
7. 10-Speed Panel Control

To Assemble

1. Before using the product for the first time, wash all the parts except the Motor Housing in warm, soapy water, and then rinse and dry thoroughly.
   CAUTION: Never immerse the Motor Housing in water or other liquids. Never use abrasive cleaners on any part of the product. Do not place any parts into a dishwasher or extremely hot water.
2. Place the Motor Housing on a flat, stable surface, and then place the assembled Glass jar in the top of the Motor Housing and turn counterclockwise until it is firmly in place.
3. Place the Lid with Cap onto the Glass jar.

HOW TO USE

CAUTION: Do not operate the product until it is properly assembled.
1. Ensure the product is unplugged from the electrical outlet.
2. Pour liquid ingredients into the glass jar.
3. Wash all solid ingredients and cut them into pieces small enough to fit into the Cap.

CAUTION: The glass jar has a six cup (48 oz. /1.5 liter) capacity. Do not over-fill it.
CAUTION: Do not use the product for mashing or grinding heavy foods (e.g., potatoes or meats) or to stir thick mixtures (e.g., dough).

4. After filling the glass jar with ingredients, place the Lid with Cap securely onto the jar.
5. Plug the product into a standard 110-120 volt AC electrical outlet.
6. Select the desired speed setting.
   - Press HI or LO to select upper or lower speed selections.

TIP: *If the Blades are not operating smoothly, stop the machine and add some liquid, stir the contents or reduce the contents in the jar.*

7. To turn off the product, press the “OFF” Button.
8. Always wait for the blades to completely stop before removing the glass jar.
9. Lift jar up and away from the main blender base.
10. Remove the cover and pour.

WARNING: Always unplug the product when it is not in use or will be left unattended.
CAUTION: Never operate the product empty.
CAUTION: Never operate the product’s motor for more than three minutes at a time. Allow the motor to cool for 60 seconds after three minutes of operation.

CARE & MAINTENANCE

WARNING: Always ensure the product is unplugged from the electrical outlet before relocating, assembling, disassembling, or cleaning it.

CAUTION: Before disassembling the product for cleaning, ensure the Blades have completely stopped and use caution when attaching or detaching them, as they are extremely sharp.

- Always clean the product immediately after each use. Wash all parts except the Motor Housing in warm, soapy water and then rinse and dry thoroughly. Never immerse the Motor Housing in water or other liquids. Never use abrasive cleaners on any part of the product. Do not place any parts into a dishwasher or extremely hot water.
- To disassemble the Glass jar for thorough cleaning, turn the Blade Base counterclockwise and remove it, and then remove the Blades and the Gasket from the Glass jar. Use a small brush (not included) to remove particles of food lodged underneath the Blades. To reassemble, replace the Gasket and the Blades into the bottom of the Glass jar, and then turn the Blade Base clockwise to tighten onto the Glass jar (refer to the Parts illustration).
- Store the product in a cool, dry place.

CLEANING

1) Make sure the blender is unplugged.
2) Remove the cutting unit assembly. Handle with care, blades are sharp.
3) Wash the cover, jar, gasket, blades and retaining ring in hot soapy water.
4) Rinse and dry.
5) Reassemble the parts. Store away with the cover ajar to prevent container odor.

TIPS

1) If blending action stops at any time, immediately turn the unit OFF. Remove the cover and use a rubber spatula or wooden spoon to push the mixture toward the blades. Replace the cover and continue blending process.
2) Do not store food in the blender jar.
3) This blender does not mash potatoes, whip cream, mix stiff dough or grind meats.